www.paperjamz.nl

Paper Jamz®

Visit www.paperjamzpro.com
Download the free app
Add your own music

8+

User manual
Manuel d'utilisation
Manual del usuario

No./ Article N°/ Artículo N° 6288

Contents / Table des matières / Tabla de contenidos

INTRODUCTION
- Package contents ... 3
- Guitar overview ... 3
- Guitar connections ... 4
- Installing or changing batteries in your guitar ... 4
- Important battery information ... 4

GETTING STARTED
- Powering Paper Jamz ... 5
- Sleep mode ... 5
- Volume control ... 5
- Strumming ... 5

MODES
- Selecting a mode ... 6

FREESTYLE MODE
- Basic Play in Freestyle mode ... 6
  - Selecting Notes or Chords ... 6
  - Playing Notes or Chords ... 7
  - Performance effects ... 7
  - Advanced guitar techniques ... 7

SONG MODE
- Selecting Perfect Play or Rhythm ... 8
- Perfect Play ... 8
- Rhythm ... 8
  - Playing Notes and Chords in Rhythm ... 8
- Basic play in Song mode ... 9
  - Selecting a song ... 9
  - Stopping or changing a song ... 9
  - Adding new songs ... 9
  - Music volume control ... 9

NOTE CHART ... 11

FURTHER INFORMATION
- Contact information ... 11
- Important safety information ... 11
- Warranty ... 12

INTRODUCTION
- Contenu de la boîte ... 14
- Aperçu de la guitare ... 14
- Connexions de la guitare ... 15
- Informations sur les piles ... 15

DÉMARRAGE
- Mise sous tension de Paper Jamz ... 16
- Mode veille ... 16
- Contrôle du volume ... 16
- Le strumming ... 16

LES MODES
- Comment sélectionner un mode ... 17

MODE FREESTYLE
- Jeu simple en mode Freestyle ... 17
- Sélectionner des notes ou des accords ... 17
- Jouer des notes ou des accords ... 17
- Effets de scène ... 18
- Techniques avancées ... 18

MODE SONG
- Comment sélectionner Perfect Play ou Rhythm ... 19
- Perfect Play ... 19
- Le mode Rhythm ... 19
  - Jouer des notes et des accords en mode Rhythm ... 19
- .Jeu simple en mode Song ... 19
  - Sélectionner une chanson ... 19
  - Comment arrêter une chanson ou changer de chanson 20
  - Ajouter des chansons ... 20
  - Réglage du volume de la musique ... 20

GUIDES DES NOTES ET DES ACCORDS ... 21

INFORMATIONS SUPPLÉMENTAIRES

Contactez-nous ... 22

Consignes de sécurité importantes ... 22

Garantie limitée de 90 jours WowWee ... 23

INTRODUCCIÓN
- Contenido de la caja ... 24
- Generalidades de la guitarra ... 24
- Conexiones de la guitarra ... 25
- Datos de las pilas ... 25

COMIENZO
- Encender Paper Jamz ... 26
- Modo Suspensión ... 26
- Control de volumen ... 26
- Rasgueo ... 26

MODOS
- Seleccionar un modo ... 27

MODO FREESTYLE
- Tocar nociones básicas en el modo Freestyle ... 27
- Seleccionar notas o acordes ... 27
- Tocar notas o acordes ... 27
- Efectos especiales ... 28
- Técnicas avanzadas de guitarra ... 28

MODO SONG
- Seleccionar Perfect Play o Rhythm ... 29
- Perfect Play ... 29
- Rhythm ... 29
  - Tocar notas y acordes en Rhythm ... 29
- Tocar nociones básicas en el modo Song ... 30
  - Seleccionar una canción ... 30
  - Parar o cambiar la canción ... 30
  - Agregar nuevas canciones ... 30
  - Control de volumen de la música ... 30

TABLAS DE NOTAS Y ACORDES ... 31

INFORMACIÓN ADICIONAL
- Información de contacto ... 32
- Información de seguridad importante ... 32
- Garantía limitada de 90 días de WowWee ... 33

LYRICS / PAROLES / LETRAS ... 34

ENG

Thank you for purchasing a WowWee™ Paper Jamz® Pro guitar! Now you're on the road to rock stardom—no strings attached!

Take a few minutes to read this user manual so you can learn how to play like a rock star.

Visit **www.paperjamzpro.com** to download the free Paper Jamz Pro app and learn how to use it to take full advantage of your guitar's features.

Package contents

1 x Paper Jamz Pro guitar; 1 x USB to mini-USB cable; 1 x User manual

Guitar overview

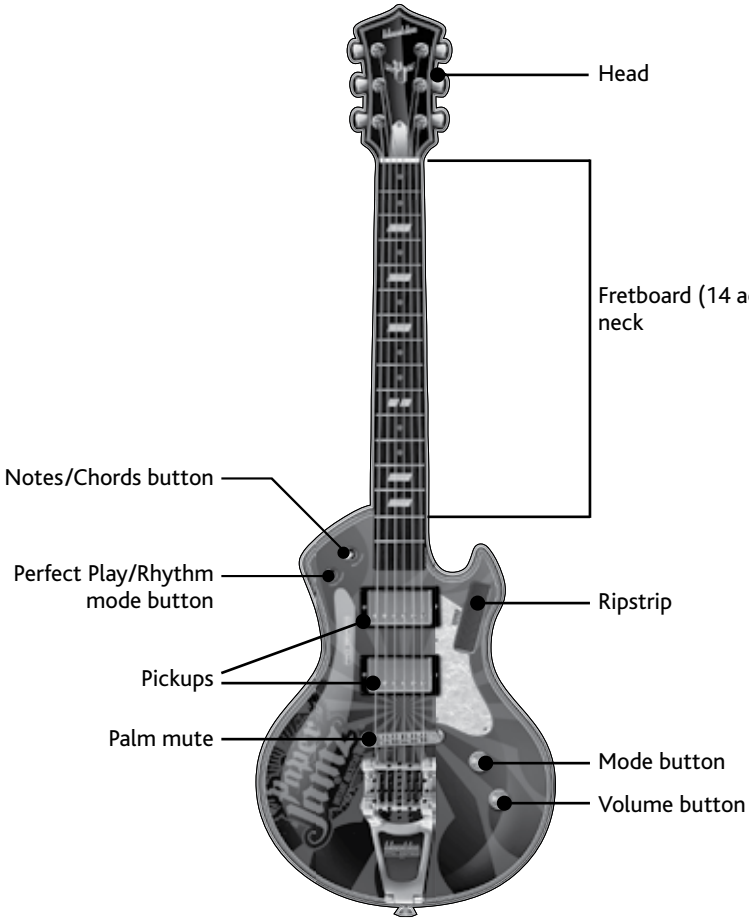

Guitar connections

Plug in headphones or an amplifier to the **audio-out jack**. Note: The guitar powers up with the volume at the highest setting, so lower the volume before using headphones.

Connect the guitar's **mini-USB port** to a computer using the included **USB to mini-USB cable** and then transfer your music to the guitar with the downloaded Paper Jamz Pro app. The expansion port is used for compatible Paper Jamz Pro accessories (not included).

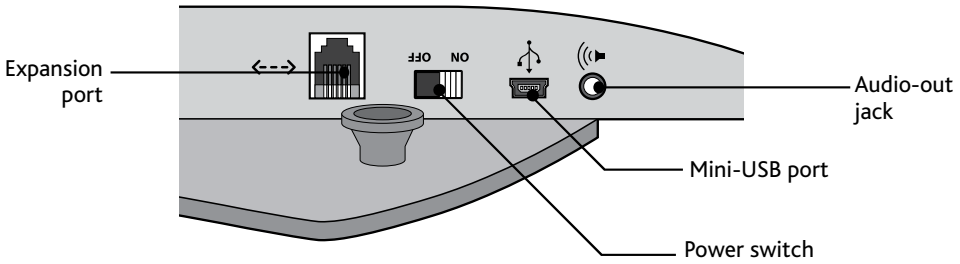

Battery details

Installing or changing batteries in your guitar:

The Paper Jamz Pro guitar requires 4 x "AA" size batteries (not included). Insert or replace batteries according to the diagram.

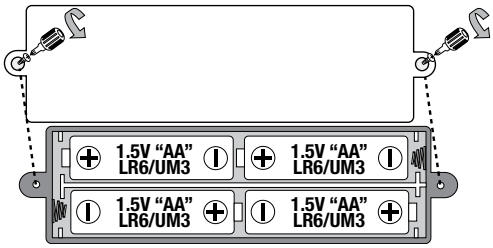

1. Open the battery compartment using a Phillips screwdriver (not included).
2. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
3. Replace the battery compartment cover. Do not over-tighten.

Important battery information

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries [standard (Carbon- zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Remove rechargeable batteries from the toy before recharging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Respect the correct polarity, (+) and (-).
- Do not try to recharge non-rechargeable batteries.
- Do not dispose batteries in a fire.
- Replace all batteries of the same type/brand at the same time.
- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults.
- Remove batteries if the toy is not going to be played with for some time.

Powering Paper Jamz

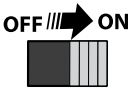

To start jamming with your Paper Jamz Pro guitar, move the power switch to the ON position.

Now you're ready to rock!

Sleep mode

If there is no activity for about 5 minutes, your guitar will go into Sleep mode. To wake it, just turn it OFF for at least 2 seconds and then back ON.

Volume control

Riffs so hot that you need to turn it up? To raise the volume, touch and hold the Volume button and then slide your fingers along the fretboard toward the pickups.

Jamming so hard that the neighbors can hear you? To lower the volume, touch and hold the Volume button and then slide your fingers along the fretboard toward the guitar head.

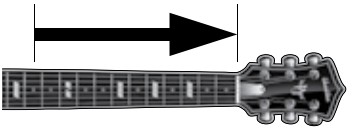

Strumming

To strum, slide your thumb or fingers up and down the strings and pickups.

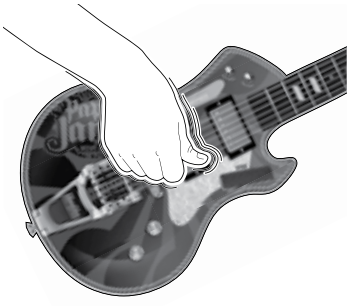

Modes

The Paper Jamz Pro guitar has two main modes: **Song** and **Freestyle**.

Selecting a mode

The Paper Jamz Pro guitar starts up in **Freestyle** mode so you can play like a pro right out of the box.

To switch to **Song** mode and play along with a song, press and hold the *Mode* button until you hear a chord sound. Then touch one of the first 3 frets. Each fret plays a different song.

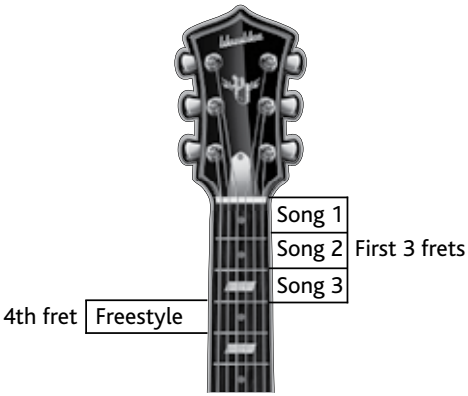

Freestyle mode

Freestyle mode lets you play real chords and notes to create your own hit songs and killer guitar solos.

If you're in **Song** mode and want to switch back to **Freestyle** mode, touch and hold the *Mode* button until you hear a chord sound. Then touch the 4th fret (*Freestyle*).

Basic Play in Freestyle mode

The Paper Jamz Pro guitar has 14 active frets that you can play. Touch one or more frets to play a note or chord while strumming and make your guitar wail.

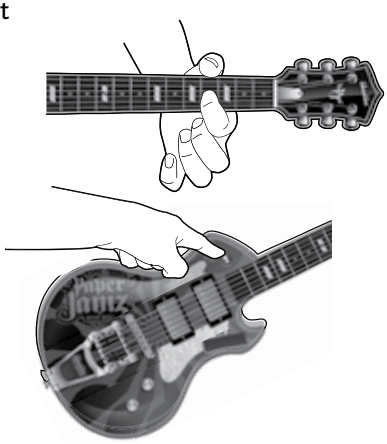

Selecting Notes or Chords

Choose between playing chords and notes by touching the *Notes/Chords* button until you hear a click sound. You can switch back and forth at any time while you play.

Playing Notes or Chords

If you're playing notes, the guitar will play the note corresponding to the highest fret (closest to the guitar body) touched. Strumming with no frets touched plays E, and each fret increases the pitch by a half step.

If you're playing chords, the guitar plays the chord corresponding to the lowest fret (closest to the guitar head) you touch. Strumming with no frets touched plays an E major chord. If you touch two frets together, the guitar will play a minor chord.

Note: See p. 10 for a chart of notes and major/minor chords.

Performance effects

You can apply performance effects to notes and/or chords to create your own awesome solos, but effects can only be applied to chords as long as you keep changing fret positions. Once a chord has played for a bit, the effects cannot be applied to it.

Ripstrip
Slide your finger on the *Ripstrip* to bend the pitch of notes and chords. Sliding toward the guitar head bends pitch down and sliding away from the guitar head bends it up. Slide your finger and hold it before strumming to start a note or chord at a different pitch.

Accelerometer
Point the neck up to play notes an octave higher. Shake the guitar head to add vibrato.

Palm Mute
Touch the *palm mute* with the base of your palm to stop the note or chord. If you hold the base of your palm on the *palm mute* while playing a chord, the chord will have a muted sound.

Advanced guitar techniques

Play your Paper Jamz Pro guitar like the real thing—do hammer-ons, pull-offs, taps and slides! Just strum a note or chord and then change which frets are touched. You can apply these techniques to both notes and chords, but like the performance effects, they can only be performed with chords as long as you keep changing fret positions.

Hammer-on
A hammer-on is when you play a note and while it's still ringing, you "hammer" your finger on a fret higher up the neck.

Pull-off
A pull-off is the opposite of a hammer-on. You create a new note by pulling your finger off while a note is ringing.

Tap
Tapping is when you generate a note by tapping the fretboard with your strumming hand.

Slide
A slide is when you play one note and then slide your finger up or down the fretboard to another fret.

***Tip:** Go to **www.paperjamzpro.com** for videos on how to rock out with these effects and techniques!*

Song mode

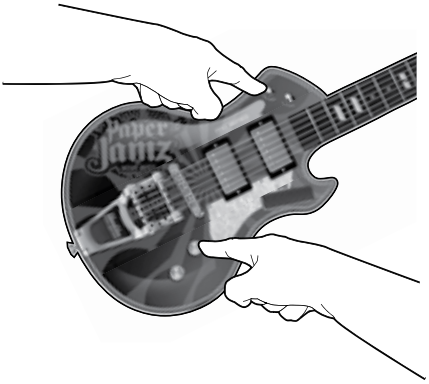

Choose **Song** mode when you want to play along with a song. To change to this mode, touch the *Mode* button until the muted chord plays and then touch the *Perfect/Rhythm* button.

There are two ways to rock out to songs with your guitar in this mode: **Perfect Play** and **Rhythm**.

Selecting Perfect Play or Rhythm

When you select Song mode, the guitar starts up in **Perfect Play**.

You can switch between **Perfect Play** and **Rhythm** at any time, even if the song is playing, by touching the *Perfect/Rhythm* button until it makes a sound.

Perfect Play

Look and sound like a guitar legend—without the years of practice! Just strum along to hear the guitar track. If you stop strumming, you'll only hear the backing track and vocals.

You can only play along with the **pre-installed songs** and **official downloadable Paper Jamz Pro songs.**

Rhythm

Rhythm gives you full control to play your own chords or notes over a song. You can apply all of the performance effects and guitar techniques in this mode.

You can play along with the pre-installed songs, **official downloadable Paper Jamz Pro songs** and **songs from your own music library**.

Playing Notes and Chords in Rhythm

Rhythm starts up with chords active when you strum. To switch to notes and play your own guitar solo notes on top of the original guitar track, touch the *Notes/Chords* button.

When **chords** are active, the guitar adjusts the chords you play so that you always sound like a pro.

When **notes** are active, the guitar adjusts the notes you play for perfect rock solos.

Basic play in Song mode

Selecting a song

Two pre-installed songs get you started on the road to rock stardom.

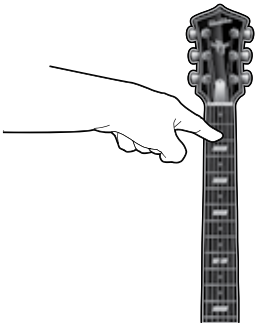

To choose a song, touch the *Mode* button and then touch one of the first 3 frets (*Song 1*, *Song 2* or *Song 3*).

Until you add your own music to the guitar, touching the 1st fret (*Song 1*) will play the first pre-installed track and touching the 2nd fret (*Song 2*) or 3rd fret (*Song 3*) will play the second pre-installed track.

When a song slot is empty, touching its button will play another loaded song when possible.

Stopping or changing a song

To stop a song and to choose another, touch the Mode button until the muted chord plays and then touch one of the first 3 frets (*Song 1*, *Song 2* or *Song 3*).

To stop a song and to switch to **Freestyle** mode, touch the Mode button until the muted chord plays and then touch either the 4th fret (*Freestyle*) or the palm mute.

Adding new songs

You can store up to three songs on your Paper Jamz Pro guitar depending on song length.

Using the free Paper Jamz Pro app, you can add songs from your own music library. Songs that have been "Certified Compatible" take advantage of enhanced guitar features (see website for more information).

Visit **www.paperjamzpro.com** to download the app and learn more about how to use it to expand your set list.

Note: Songs from your own collection only work in **Rhythm** so you can play your favorite music how you want it to sound.

Music volume control

In Song mode, you can also change the volume of the music independently of the guitar chords and notes. Touch and hold the *Volume* button and then slide your finger on the *Ripstrip*. Moving your finger toward the guitar head lowers the volume and moving it toward the *palm mute* raises the volume.

● = required fingering

○ = optional second finger position

MAJOR CHORDS

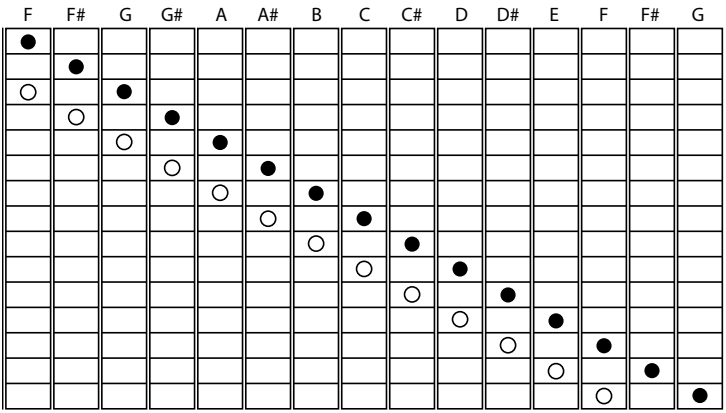

MINOR CHORDS

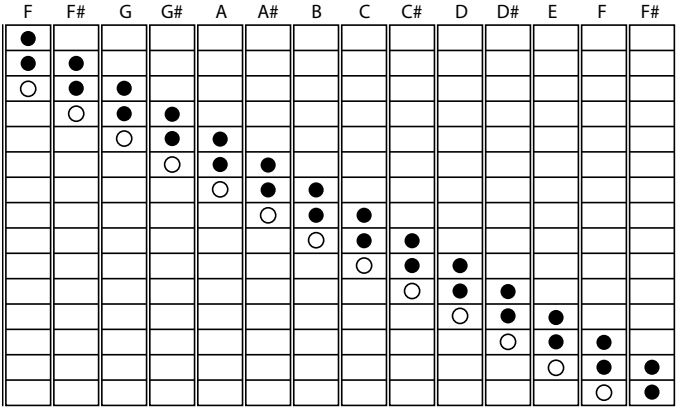

NOTES

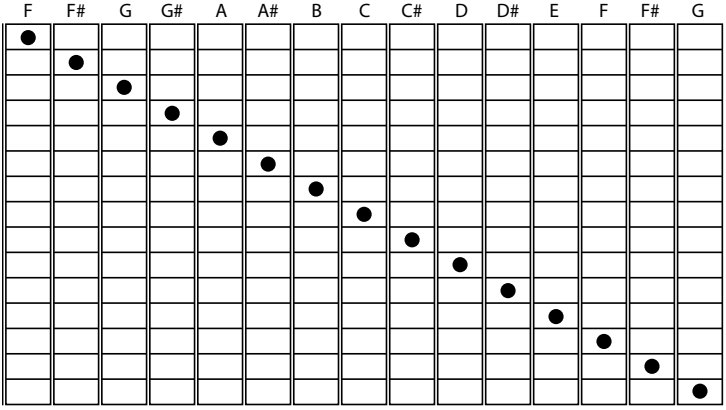

Contact information

To learn more about Paper Jamz or to see the full range of WowWee products, go to **www.wowwee.com**

Register your Paper Jamz Pro guitar at **www.wowwee.com/register**

If you have questions that are not answered in this manual, refer to **www.wowwee.com/support**

Important safety information

Take note of the following when playing with the Paper Jamz Pro guitar:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE
This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or experienced radio/TV technician for help

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

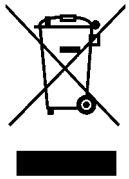

The equipment that you have purchased has required the extraction and use of natural resources for its manufacturing. It may contain substances that are hazardous to health and the environment. In order to prevent the release of these substances into the environment and to reduce the pressure on natural resources, we encourage you to use appropriate return systems. These systems will ensure that most of the materials in your equipment are properly reused or recycled at the end of its operational life. The crossed-bin symbol invites to use these systems. For further information on collection, reuse and recycling systems, please contact your regional waste management administration.

This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

This equipment may experience difficulty and/or memory loss when subjected to any electrostatic discharge, radio frequency interference, or sudden power surge/interruption. The user is encouraged to reset the equipment should any of these occur.

Under the environment with electrostatic discharge, the sample may malfunction. It requires user to reset the sample by re-plugging the USB cable and then restarting the software again.

WowWee 90-Day Limited Warranty

WowWee's warranty obligations for this Paper Jamz® Pro guitar (this "Product") are limited to the terms set forth below.

WowWee Group Limited ("WowWee") warrants to the original end-user purchaser that this Product will be free from defects in materials and workmanship under normal use for a period of 90 days from the date of retail purchase (the "Warranty Period"). This warranty is extended only to the original end-user purchaser of a new product that was not sold "as is".

If a defect arises:
(1) you may within 30 days from the date of retail purchase (or such other period specified by the return policies of the place of purchase)return this Product to the place of purchase, together with the original proof of purchase and either the original box or the UPC code label from the box, and this Product will be replaced or, in the event that a replacement for this Product is not available at the place of purchase, either a refund of the purchase price for this Product or a store credit of equivalent retail value will be provided; or
(2) you may after the day that is 30 days from the date of retail purchase (or such other period specified by the return policies of the place of purchase) and within the Warranty Period contact WowWee Customer Support to arrange for the replacement of this Product. In the event that a replacement for this Product is not available this Product will be replaced by WowWee with a product of equivalent or greater retail value.

Notwithstanding the foregoing terms of this warranty, WowWee reserves the right at all times, at its sole option and discretion, to refund to you the purchase price paid by you for this Product in full and final settlement of WowWee's obligations under this warranty.

A purchase receipt or other proof of the date of retail purchase and purchase price is required in order to claim the benefit of this warranty.

If this Product is replaced, the replacement product becomes your property and the replaced Product becomes WowWee's property. If the place of purchase refunds the purchase price of this Product or issues a store credit of equivalent retail value, this Product must be returned to the place of purchase and becomes WowWee's property. If WowWee refunds the purchase price of this Product, this Product must be returned to WowWee and becomes WowWee's property.

EXCLUSIONS AND LIMITATIONS
This warranty covers the normal and intended use of this Product. This warranty does not apply: (a) to damage caused by accident, abuse, unreasonable use, improper handling and care or other external causes not arising out of defects in materials or workmanship; (b) to damage caused by service performed by anyone who is not an authorized representative of WowWee; (c) to any hardware, software or other add-on components installed by the end-user; (d) if this Product has been disassembled or modified in any way; (e) to cosmetic damage, including but not limited to scratches, dents or broken plastic, or normal wear and tear.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MIGHT ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. WOWWEE'S RESPONSIBITLITY FOR PRODUCT DEFECTS IS LIMITED TO THE REPLACEMENT OF THIS PRODUCT OR THE REFUND OF THE PURCHASE PRICE FOR THIS PRODUCT. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN TIME TO THE TERM OF THIS LIMITED WARRANTY. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE EXPIRATION OF THE LIMITED WARRANTY PERIOD. If any term of this warranty is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW, WOWWEE IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES HOWSOEVER CAUSED RESULTING FROM BREACH OF WARRANTY OR CONDITION OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOSS OF USE. THE FOREGOING LIMITATION SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR OMISSIONS.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THESE LIMITATIONS MIGHT NOT APPLY TO YOU.

Valid only in U.S.A.

Visit www.paperjamzpro.com
Download the free app
Add your own music
Watch videos that teach you to rock out

Visite www.paperjamzpro.com
Télécharge l'application gratuite
Ajoute tes propres morceaux
Visionne des vidéos pour apprendre à jouer

Visita www.paperjamzpro.com
Descarga la aplicación gratuita
Agrega tu propia música
Mira vídeos que te enseñan a rocanrolear

WOWWEE GROUP LIMITED.
ENERGY PLAZA, 3/F
92 GRANVILLE ROAD
T.S.T. EAST, HONG KONG

WOWWEE CANADA INC.
3500 DE MAISONNEUVE WEST
SUITE 800
MONTREAL, QC H3Z 3C1 CANADA

WOWWEE USA INC.
875 PROSPECT SUITE #202
LA JOLLA, CA 92037

Manufactured and distributed by © 2011 WowWee Group Limited. Product names, designations,and logos are trademarks or registered trademarks of WowWee Group Limited. All rights reserved.
Consumer hotline: 1-800-310-3033
Customer service: www.wowwee.com/support
Customer support is only available in English and French.

We recommend that you retain our address for future reference. Product and colors may vary. Packaging printed in China. This product is not suitable for children under 3 years because of small parts — choking hazard.
This user manual should be kept as it contains important information.
Made in China.

Fabriqué et distribué par © 2011 WowWee Group Limited.
Les noms de produits, les désignations, et les logos sont des marques de commerce et des marques déposées de WowWee Group Limited.
Tous droits réservés.
Service à la clientèle : 1-800-310-3033
Courriel du service à la clientèle : www.wowwee.com/support
Le service à la clientèle est disponible uniquement en anglais et en français.
Conserver notre adresse pour référence ultérieure.
Les produits et les couleurs peuvent varier.
Emballage imprimé en Chine.
Ce produit n'est pas fait pour les enfants de moins de 3 ans.
Contient des petites pièces qui peuvent entraîner la suffocation.
Conserver le guide d'utilisation car il contient des renseignements importants.
Fait en Chine.

Fabricado y distribuido por el grupo de © 2011 WowWee Group Limited.
Los nombres de producto, las designaciones, y las insignias son marcas registradas o marcas registradas del wowwee group limited. Todos los derechos reservados.
Teléfono directo del consumidor: 1-800-310-3033
Servicio de atención al cliente: www.wowwee.com/support
Servicio de atención al cliente sólo está disponible en inglés y francés.
Conservar nuestra dirección para futura referencia. El producto y los colores pueden variar. Empaquetado impreso en China. Este producto no es conveniente para niños menores a 3 años debido a piezas pequeñas - peligro de asfixia.
Conserve el manual del usuario ya que contiene informacion importante.
Hecho en China.

Paper Jamz® Pro User Manual © 2011 WowWee Group Limited. All rights reserved.
Tous doits réservés. Todos los derechos reservados.

6288M01101WCO